

Important!


- TREAT MISSY KISSY GENTLY AND LOVINGLY.
- Feed water only.
- Do not place doll in water.
- Do not turn doll head all the way around.
- Use Missy Kissy accessories only.

To Install/Replace Batteries:

No Batteries Included.

Requires 3 x 1.5V size AA batteries.

To install or replace batteries, use a Phillips screwdriver to loosen screw on battery compartment top located on the back of the doll. Lift top and replace batteries. Once batteries are replaced, close top and tighten screw.

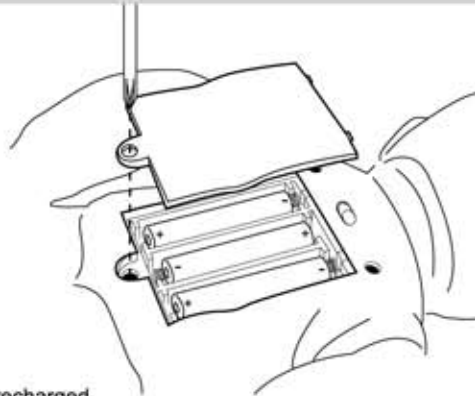

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Different types of batteries or new and used batteries are not to be mixed.

Only batteries of the same or equivalent type as recommended are to be used.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.



Missy Kissy® Care Guide



For questions or comments, visit www.jctoys.com
or contact us at info@jctoys.com

Miami, Florida 33178.
©2005 JC Toys Group, Inc.



For more information visit:
www.JCTOYS.COM

On/Off (install batteries before play)

Switch doll on and let the fun begin.

(On/Off switch is located on doll's back)



Sleepy Time:

“I’m sleepy”



Babies need to rest. When baby asks for bedtime, gently place pacifier in mouth to hear a sweet lullaby. Lay your baby down to rest and she looks like she is really sleeping. Sweet dreams!



Its Play Time:

“Mommy let’s play!”



Before playtime, make sure to change Missy Kissy so that she is nice and dry. Use your imagination to play all kinds of baby games with her.

Kiss the doll!

“Mommy... kissy”

When doll is switched on she will ask for a kiss. Kiss the doll's face and Missy Kissy will ask mommy for different activities. So much fun!



Potty Time:


“Mommy...potty time”



When doll is full she will ask to go potty. Remove doll's clothing and seat correctly on potty. Once positioned, doll will begin to tinkle and a cute sing-a-long song will play.

Feeding Time:

“I’m hungry!”

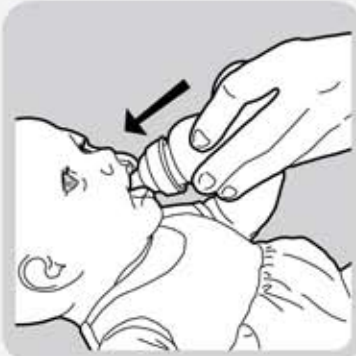

When Missy Kissy is hungry feed her with her special baby bottle. (Use water only). Place bottle tip in doll's mouth and gently squeeze bottle to feed her. When doll is full she will ask for her potty.